

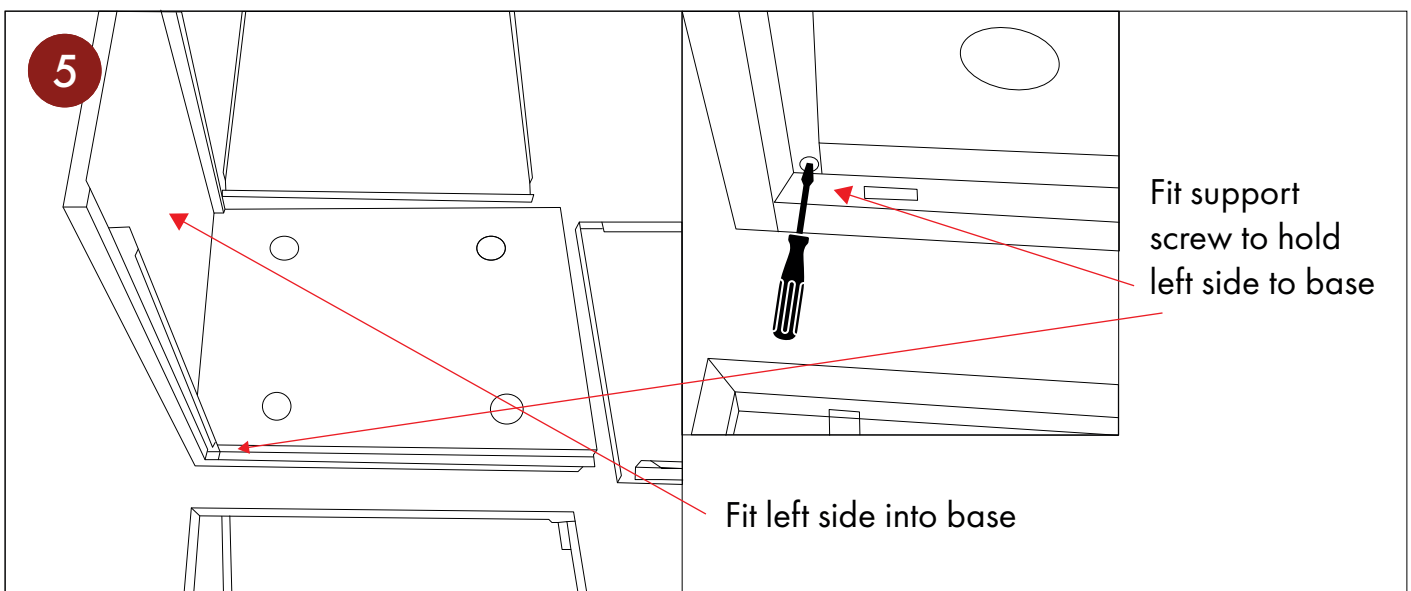
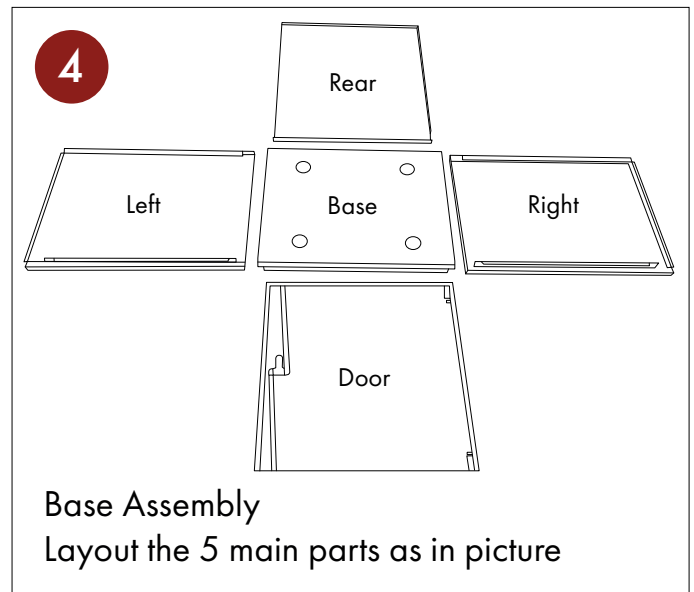
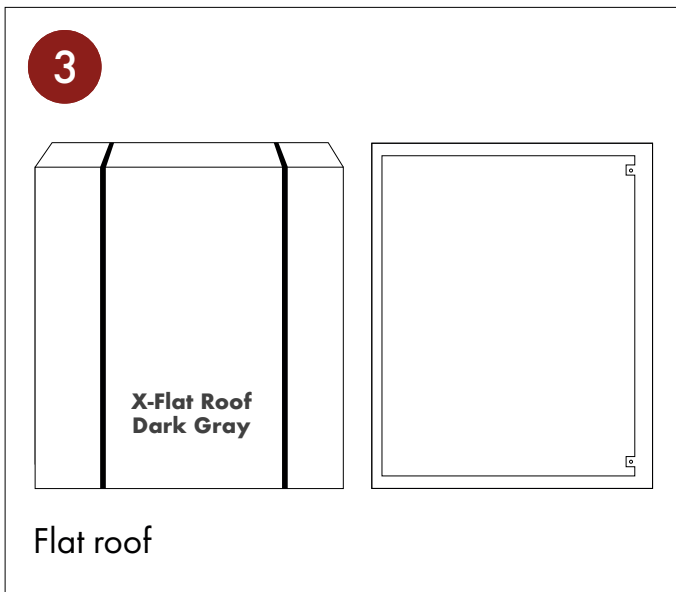
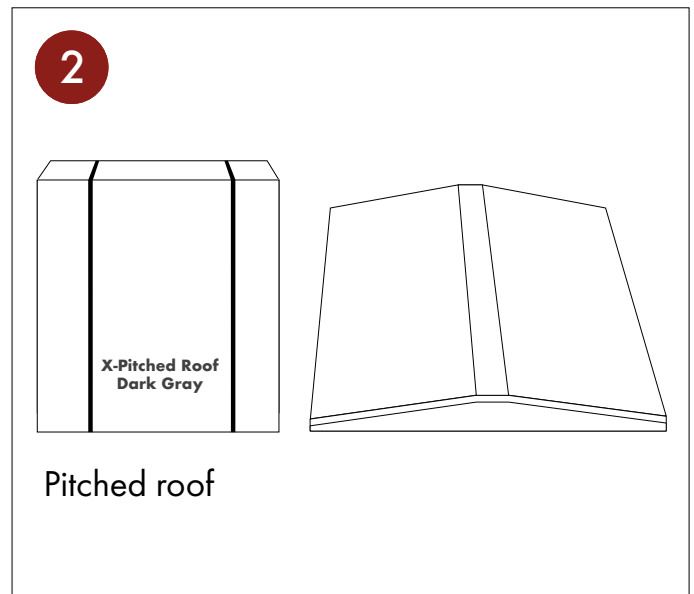
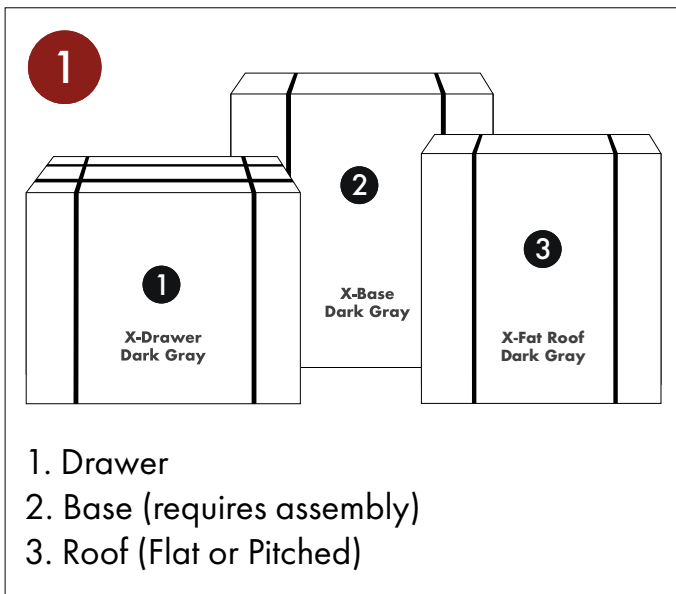
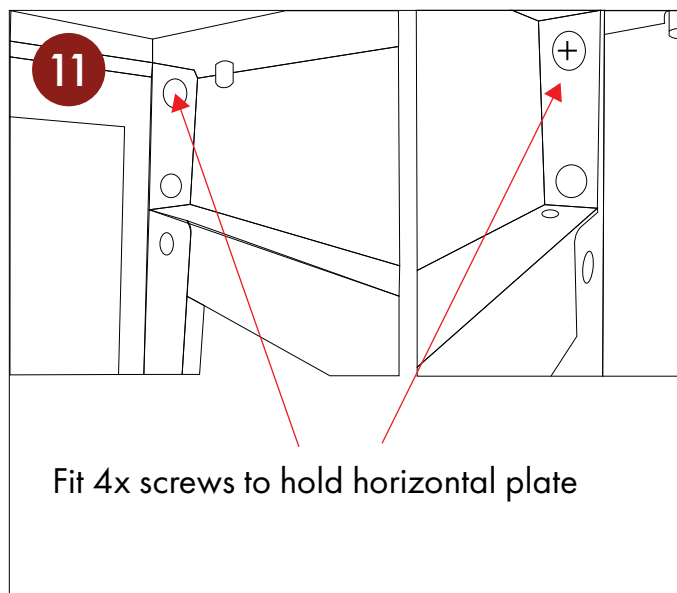
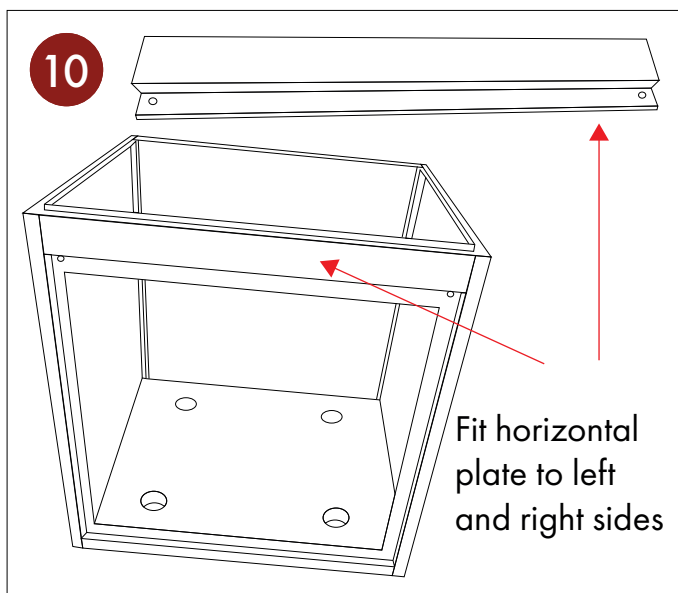
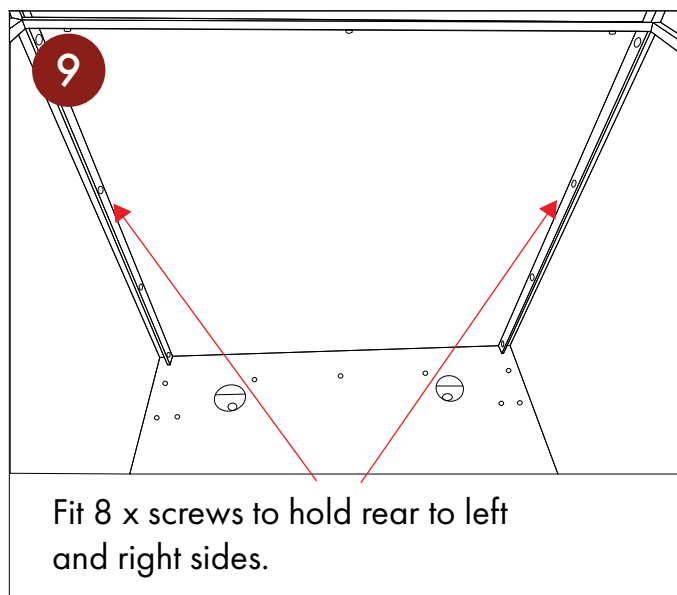
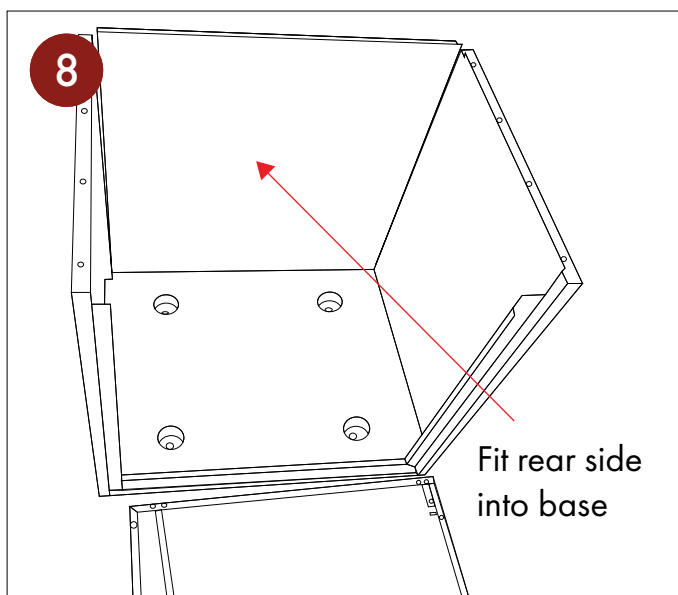



Parcel Box Assembly Instructions

Please read carefully and it WILL save you time.

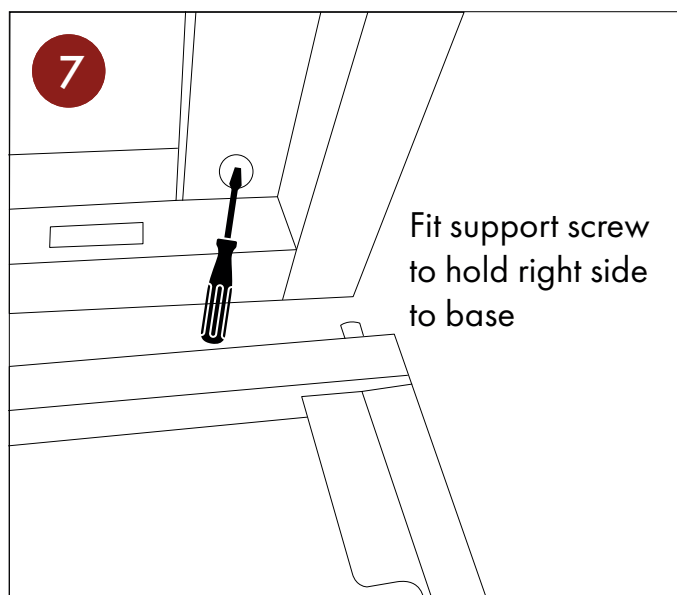

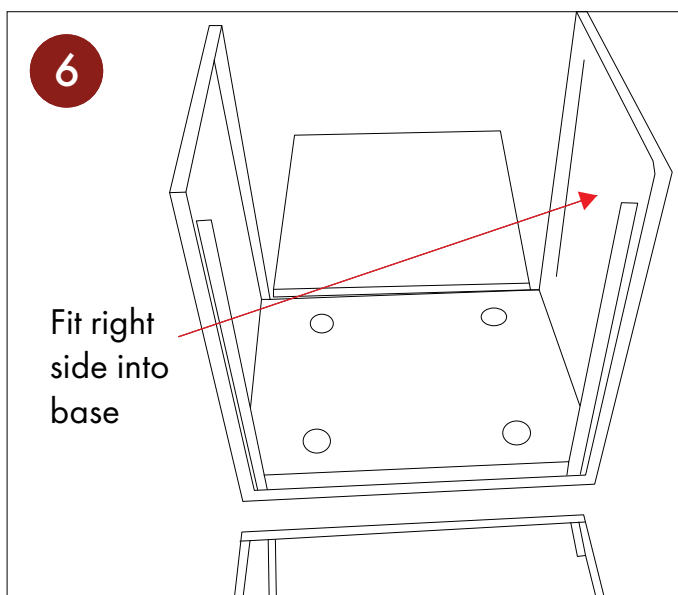


12

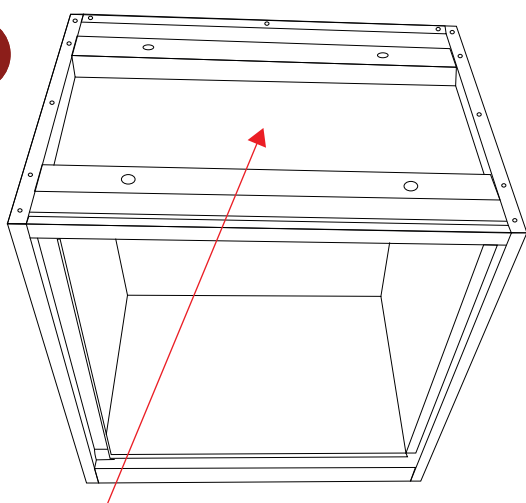

Flip base upside


13

Fit 14 x screws to base

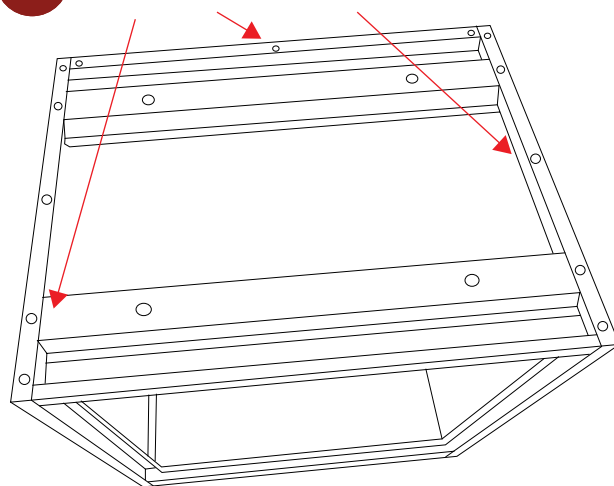


14

Unpack draw unit

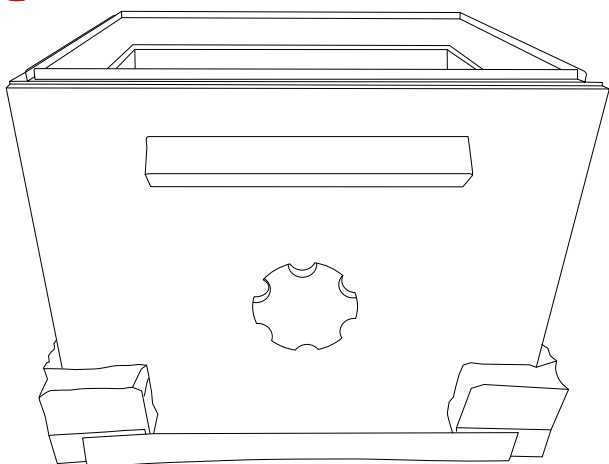


15

Remove draw

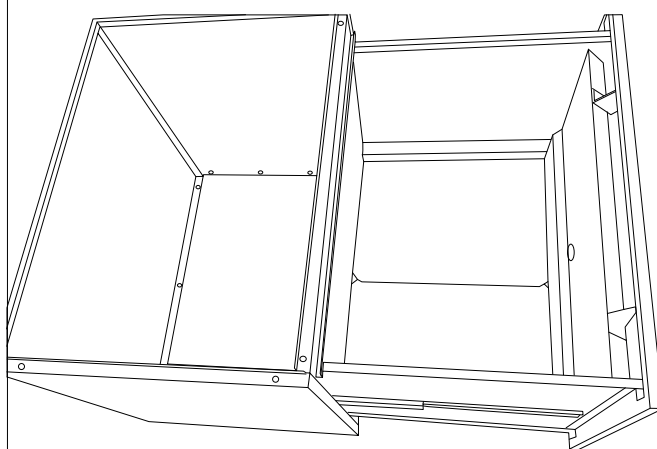


16

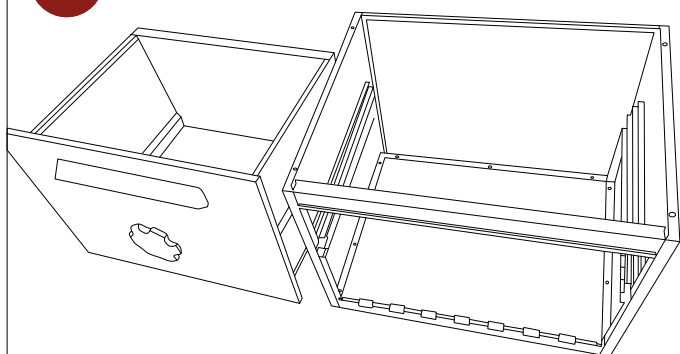


Draw removed from top assemble

17

Flat or pitched roof

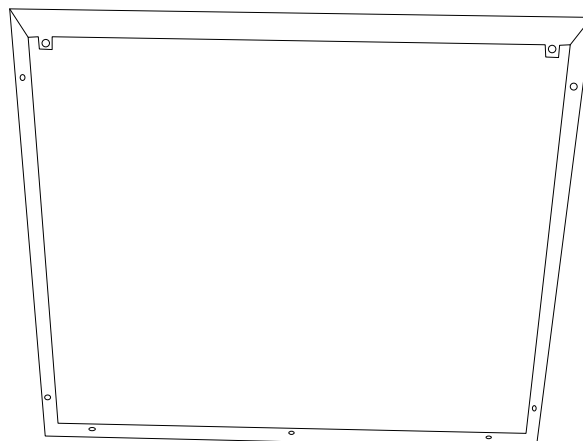


- 18** Fit roof to top assembly. Fit several screws to hold roof in place

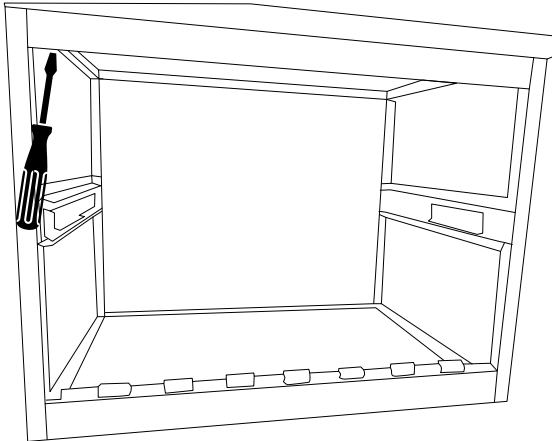


19


Turn top assembly and roof on side and fit 9x screws to roof

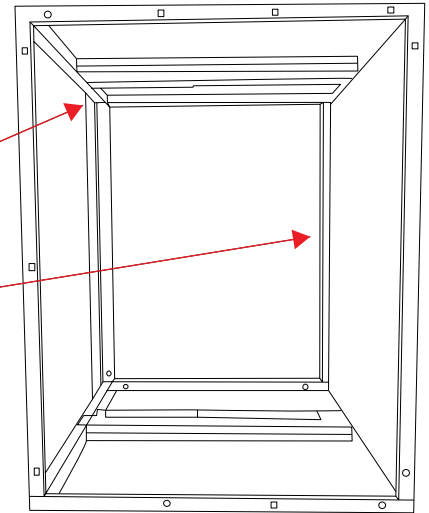


20

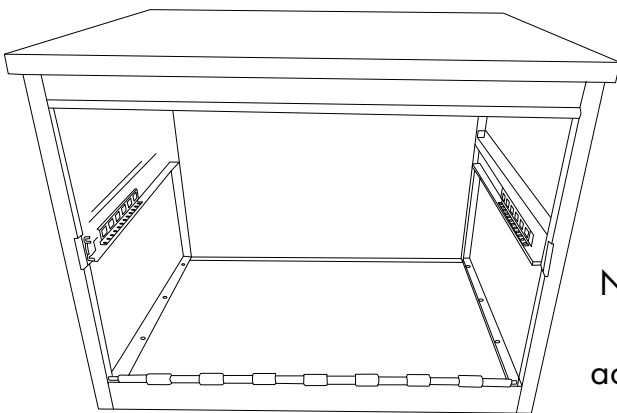

Place top assembly onto base.
Note- Fit for front or rear door access as required

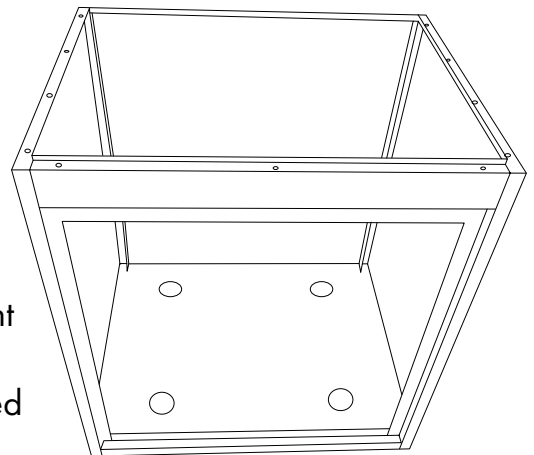


- 21** Fit 14 x screws to secure Top Assembly to Base

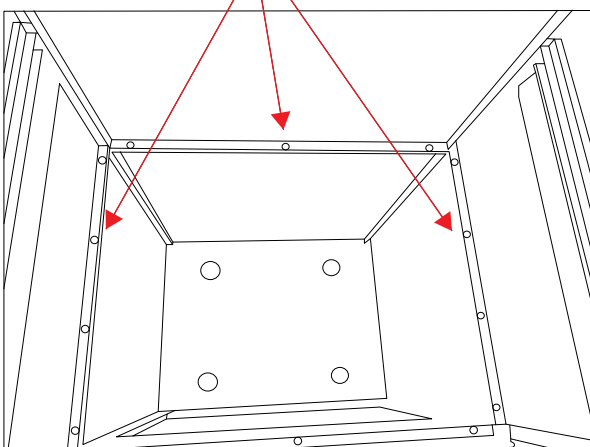


22


If fixing hard up against wall.
Mark up 4x holes to wall, drill, fit wall plugs and fixings.

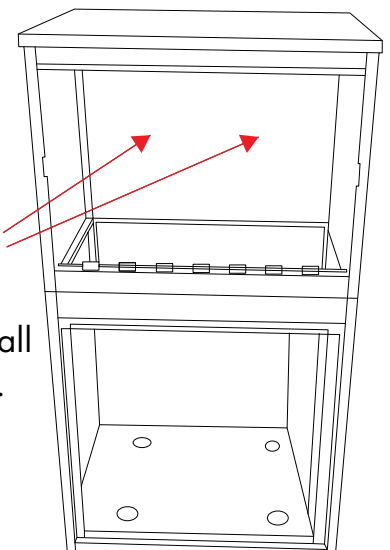


23

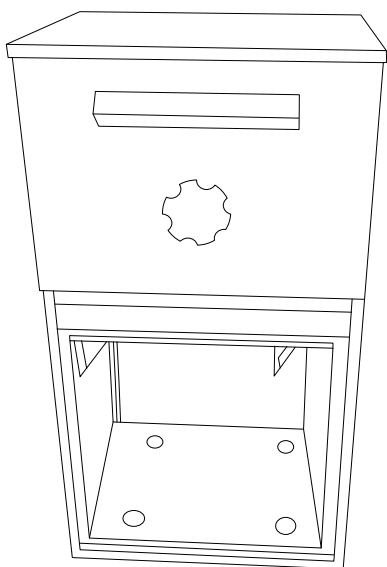

Carefully refit drawer to Top Assembly.

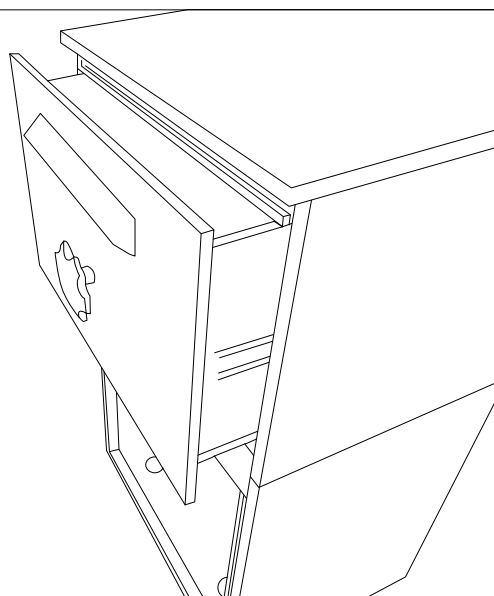


25

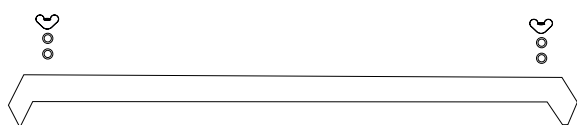


Draw locking bracket

Fit draw locking bracket to back of drawer using supplied wingnuts and washers.

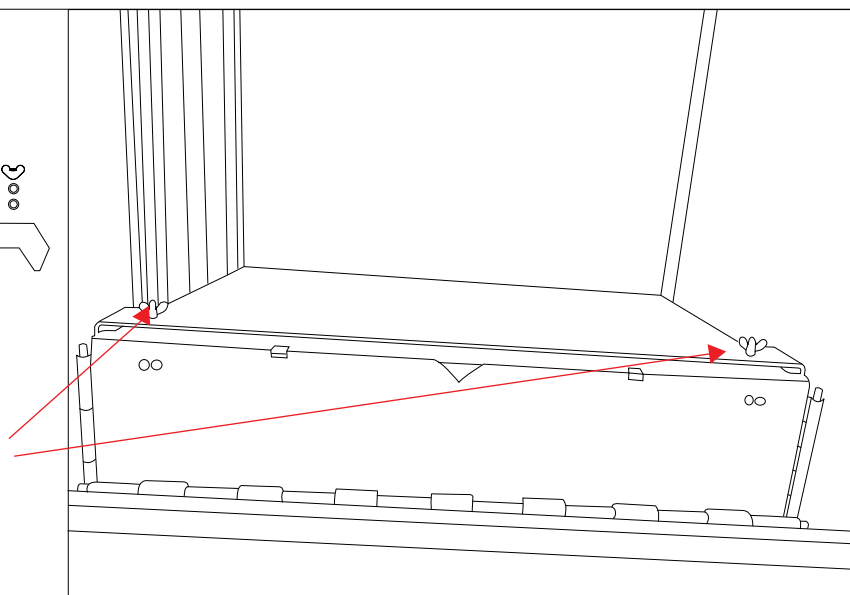

27

Place 2 x nylon washers on door frame and fit door hinge

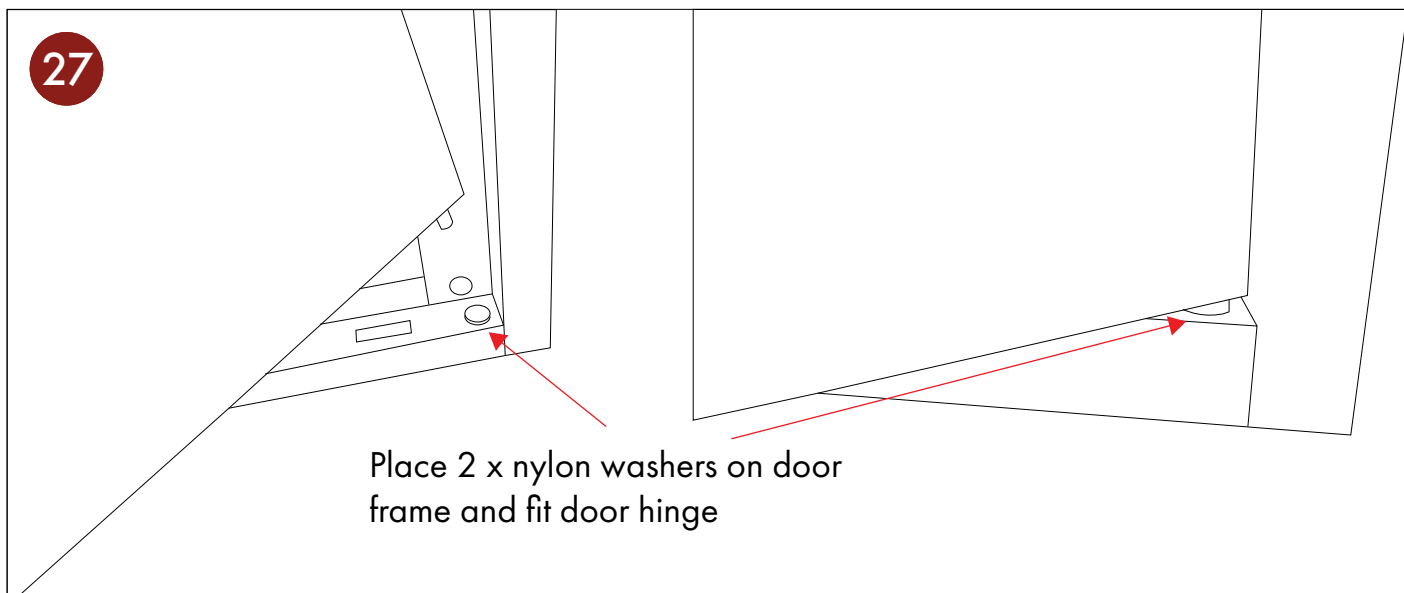

23

Fit door hinge to
top of door frame

